



Overview

Description	Enable cameras for surveillance mode on StruxureWare Data Center Expert.
Model Name	Data Center Expert Surveillance Configuration
Standard Lead Time	Usually in Stock
Product Distribution	Afghanistan

Disclaimer: This documentation is not intended as a substitute for and is not to be used for determining suitability or reliability of these products for specific user applications.