

Navigation Through the Menu

Settings Controls

Use the following buttons and text display to change menu settings in Menu mode.



ESC key: Jump to a higher level in the menu; discard entries



UP key: Move up in the menu; increase values



DOWN key: Move down in the menu; decrease values



MENU: Enter Menu mode
Enter (↵): Select the next menu level; confirm entries



Text display for Menu mode

How to Access the Main Menu

Hold the MENU button for at least one second. The device will enter into Menu mode. The first item in the menu, 1.VALUES, will appear. The number "1" will flash.

Entering the Password

Most of the submenus may be password protected. If you are authorized to modify settings, follow these steps to enter the password:

1. A flashing number illustrates the current setting.
2. Use the UP/DOWN key to select the first correct digit of the password.
3. Confirm by pressing Enter (↵).
4. Proceed in the same way until the last digit of the password is confirmed.
5. Settings may be modified as long as you remain in the menu. Exiting the menu will require a re-entry of the password.

When a parameter is changed and confirmed by pressing Enter (↵), the change will have an immediate effect. The Iso-Gard LIM will continue to operate while settings are changed.

Exiting the Menu

Press the ESC key to return to the last step in the menu. Repeat this step until you are out of the menu.

NOTE: If the Iso-Gard LIM is idle for five minutes while in Menu mode, the system will automatically return to the main screen.